 




IndigoVision

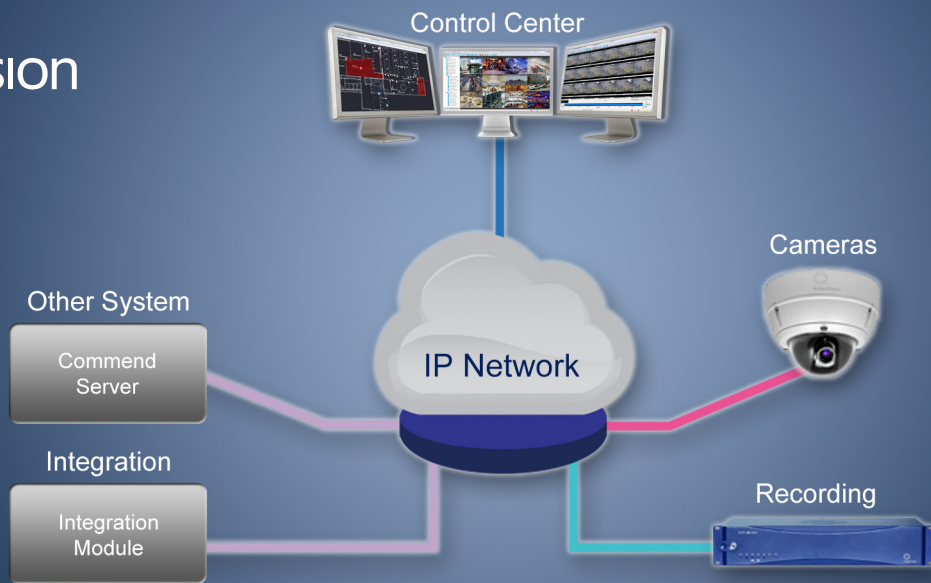

Commend

The IndigoVision Commend Integration Module allows events from the Commend intercom system to be seamlessly combined with IndigoVision's video security solution, giving complete video and alarm management in a single user interface – Control Center

Trigger live video, move PTZ cameras, start recordings and send notification emails automatically - all helping to dramatically decrease operator response time.

Triggered by intercom system events complete situational awareness through amazingly high quality video now becomes a reality

Key Features

CONTROL CENTER
ACTING AS FRONT END



Product Codes

	Product Code
Commend Integration Module	317926



Specifications

General Specifications	
Commend System Software Requirements	TCP/IP ICX interface card, ICX license option
IndigoVision System Software Requirements	IndigoVision Commend Integration Module v1.0. Compatible with SMS4™ r2/Control Center v11.0 or later
Event and Alarm Integration Capability	Unidirectional flow of events from the Commend intercom system into Control Center.
Integration Server Specification	Refer to Commend documentation for advice on machine specifications. The IndigoVision Commend Integration Module can run on any networked PC with a connection to the Commend system. There are no extra requirements on the specification of the PC due to the IndigoVision software. NOTE: The Integration Module is a licenced product. A correctly licenced USB dongle should be present on the platform running the Integration Module. The Integration Module should not be run on the same server as any other dongle licenced IndigoVision software such as the Windows NVR-AS.
Supported Products	Compatible with Commend servers supporting the ICX interface; such as: C-IS300, C-GE300, C-GE800, Virtuosis Software Intercom Server
Supported Operating Systems	Microsoft® Windows Server 2008 R2®, Microsoft® Windows 7® (64bit)
Integration Method	The IndigoVision Commend Integration Module uses the ICX interface to integrate with the Commend system. The Integration Module supports a connection to up to 50 Commend servers each of which can be configured with their maximum number of connected intercom stations.

Commend Events and IndigoVision Actions Supported

Examples of Supported Events
Commend server online
Commend server offline
Call request (button pressed)
Call start (call picked up)
Call interruption
Call transferred
Call end
Door opened
Door ringing (initiated call from a station)
Fault condition
Public address

Examples of Supported Actions
PTZ Camera moves to Preset
Video from one or more cameras displayed on operator's PC
Notification email sent
Video from any camera displayed on an analogue monitor
Recording of any camera started
CCTV site map pops up with event source highlighted
Relay triggered action initiated e.g. door opens or lights turn on