 




IndigoVision

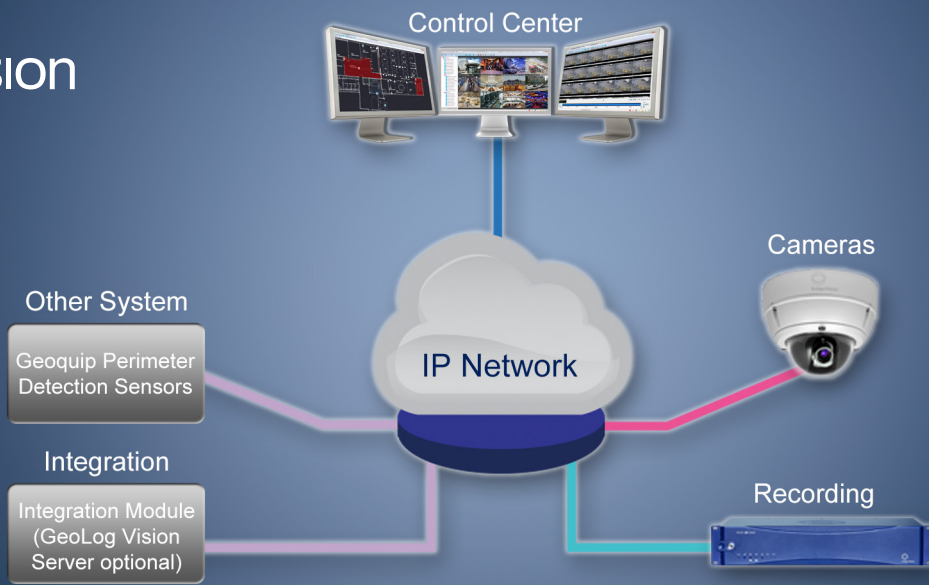

# Geoquip

The IndigoVision Geoquip Integration Module allows alarms and events from the Geoquip system to be seamlessly combined with IndigoVision's video security solution, giving complete video and alarm management in a single user interface – Control Center.

Trigger live video, move PTZ cameras, start recordings and send notification emails automatically - helping to dramatically decrease operator response time.

## Key Features



CONTROL CENTER  
ACTING AS FRONT END

## Product Codes

Product Code	
Geoquip Integration Module	317922



# Specifications

NOTE: Any project requiring the IndigoVision Geoquip Integration Module needs Geoquip's approval (plus a project specific NDA). Further information is available from your IndigoVision Account Manager or Product Management.

General Specifications	Integration via GeoLog Vision Server	Direct Integration with Detection Sensors
Geoquip System Software Requirements	GeoLog Vision Server v5.44.0	No Geoquip software needed
IndigoVision System Software Requirements	IndigoVision Geoquip Integration Module v1.0. Compatible with SMS4™ r2/ Control Center v11.0 or later	IndigoVision Geoquip Direct Integration Module v1.0. Compatible with SMS4™ r2 onwards
Event and Alarm Integration Capability	Unidirectional flow of events and alarms from the Geoquip system into Control Center.	
Integration Server Specification	<p>The GeoLog Vision Server requires a licence available from Geoquip. Refer to the GeoLog Vision documentation for the recommended system specification. The IndigoVision Geoquip Integration Module can run on the same PC as the GeoLog Vision Server or any other networked PC. The Geoquip Integration Module integrates with the GeoLog Vision Server and is compatible with any perimeter detection sensor that can be connected to the GeoLog Vision Server.</p> <p>There are no additional requirements on the specification of the PC due to the IndigoVision software.</p> <p>NOTE: The Integration Module is a licenced product. A correctly licenced USB dongle should be present on the platform running the Integration Module. The Integration Module should not be run on the same server as any other dongle licenced IndigoVision software such as the Windows NVR-AS.</p>	Geoquip Detection Sensors require a RS-232 serial connection for each device being connected to. The Integration Module supports up to 100 Geoquip devices.
Supported Products	MicrAlert, CentrAlert, Commander	
Supported Operating Systems	Microsoft® Windows 7®, Microsoft® Windows Server 2008 R2®	
Integration Method	N/A	Audio input from Geoquip sensor devices can be integrated into Control Center by connecting a Geoquip MicrAlert to an IndigoVision encoder (purchased separately). Audio input from individual Geoquip cables can be selected from within IndigoVision Control Center.

## Geoquip Events and IndigoVision Actions Supported

Integration via GeoLog Vision Server - Examples of Supported Events	Direct Integration with Detection Sensors - Examples of Supported Events
Alarm on	Alarm on
Alarm off	Alarm off
Tamper	Tamper
Pre alarm	
Short circuit	
Alarm panel event	
System event	

Examples of Supported Actions
PTZ Camera moves to Preset
Video from one or more cameras displayed on operator's PC
Notification email sent
Video from any camera displayed on an analogue monitor
Recording of any camera started
CCTV site map pops up with event source highlighted
Relay triggered action initiated e.g. door opens or lights turn on