




IndigoVision

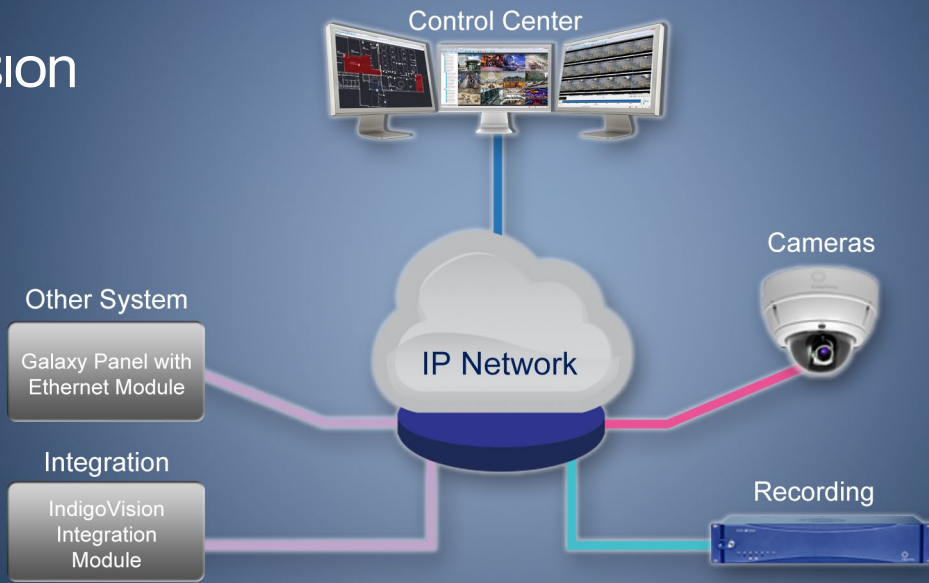

Honeywell

Galaxy

The IndigoVision Honeywell Galaxy Integration Module allows alarms and events from the Honeywell Galaxy system to be seamlessly combined with IndigoVision’s video security solution, giving complete video and alarm management in a single user interface – Control Center.

Trigger live video, move PTZ cameras, start recordings and send notification emails automatically - all helping to dramatically decrease operator response time.

The integration also enables users to monitor and control Honeywell Galaxy panels from within Control Center, allowing them to for example set/unset an entire alarm panel or groups of zones.

Key Features

CONTROL CENTER
ACTING AS FRONT END



Product Codes

Product Code	
Honeywell Galaxy Integration Module, Software License Key*	317401

*Supported from v1.3 of the Integration Module onward

Specifications

General Specifications	
Honeywell Galaxy System Software Requirements	Galaxy Series 3 Panel firmware v5.0 or later, Galaxy Dimension Panel firmware v6.0 or later, Galaxy Flex 1 Panel firmware v1.0 or later, Galaxy Flex 3 Panel firmware v3.01 or later, Ethernet Module E080-2 firmware v1.0 or later, Ethernet Module A083 firmware v1.0 or later, Ethernet Module E080-04 firmware v3.0 or later.
IndigoVision System Software Requirements	IndigoVision Honeywell Galaxy Integration Module v1.3. Compatible with SMS4™ r2/Control Center version 11.0 onwards
Event and Alarm Integration Capability	Unidirectional flow of events and alarms from the Honeywell Galaxy system into Control Center.
Manually Control Actions within the Third Party System	Relays in Control Center can interact with the Honeywell Galaxy alarm panel. Supported functionality includes: omit and restore individual zones, activate and deactivate relay outputs, set/unset/partset an entire alarm panel, reset an alarm panel, abort setting an alarm panel, force set an alarm panel, set/unset groups of zones.
Integration Server Specification	The IndigoVision Honeywell Galaxy Integration Module can run on any PC that has Ethernet connectivity to the Galaxy panel. The Integration Module does not have any significant CPU or memory requirements for the host PC. NOTE: The Honeywell Galaxy Integration Module is a licenced product. A correctly licenced USB dongle or software license key must be present on the platform running the Integration Module. The Honeywell Galaxy Integration Module should not be run on the same server as the Windows NVR-AS 13.2 or earlier or certain Integration Modules.
Supported Products	Galaxy 3, Galaxy 16/16+ , Galaxy 8/18/60/128/502/504/512, Galaxy Dimension Series, Galaxy Flex Series, Galaxy G2 Series. NOTE: The Galaxy G2 Series does not support manually controlled actions from within Control Center such as setting/unsetting zones or the whole panel, controlling relay outputs, etc.
Supported Operating Systems	Microsoft® Windows Server 2012 R2®, Microsoft® Windows Server 2012®, Microsoft Windows 10® (64-bit), Microsoft® Windows 8/8.1® (64-bit), Microsoft® Windows 7® (64-bit)
Integration Method	The IndigoVision Honeywell Galaxy Integration Module uses ANSI/SIA DC-09-2007 to integrate with Honeywell Galaxy alarm panels and is compatible with panels fitted with a Galaxy Ethernet Module. The maximum number of supported alarm panels is 300. The Integration Module is capable of representing the state of the Galaxy panel (set/unset/part set) through detectors in Control Center.

Honeywell Galaxy Events and IndigoVision Actions Supported

Examples of Supported Events
Cardholder access events
Normal entry
Fault and tamper
Burglar alarm
Holdup/Duress alarm
Intruder zone events
Fire zone events
Vibration zone events
Personal attack zone events
Time zone events
Manager reset
Engineer reset
PIN change

Examples of Supported Actions
PTZ Camera moves to Preset
Video from one or more cameras displayed on operator's PC
Notification email sent
Recording of any camera started
CCTV site map pops up with event source highlighted
Two way audio connection established so operator can listen and talk to the source of the event
Relay triggered action initiated e.g. door opens or lights turn on