IndigoVision

Control Center

Cameras

Other System

Senstar PIDS/Sensors

IP Network

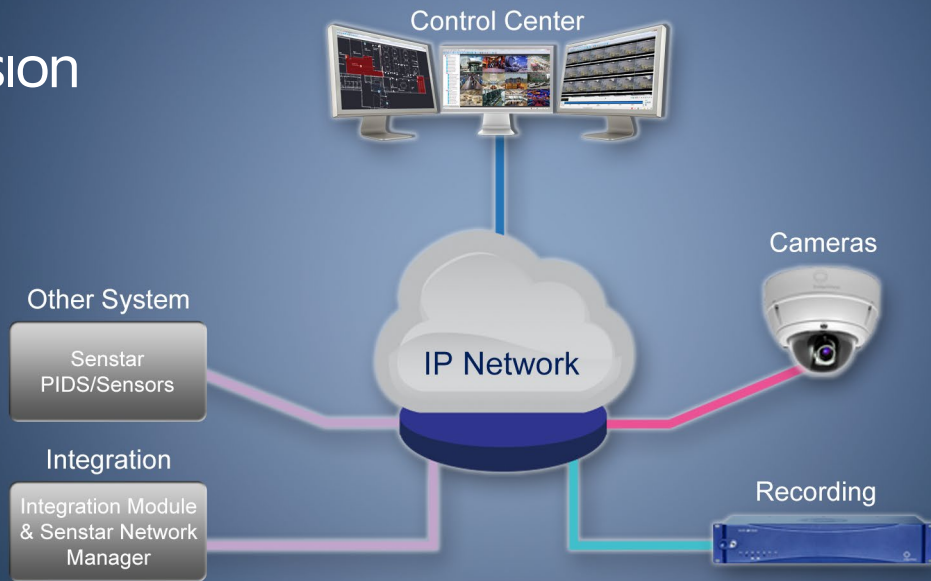Integration

Integration Module & Senstar Network Manager

Recording

Senstar

The IndigoVision Senstar Integration Module allows alarms and events from Senstar systems to be seamlessly combined with IndigoVision's video security solution, giving complete video and alarm management in a single user interface – Control Center.

Trigger live video, move PTZ cameras, start recordings and send notification emails automatically - helping to dramatically decrease operator response time.

Key Features

CONTROL CENTER ACTING AS FRONT END

Product Codes

	Product Code
Senstar Integration Module	317908

SENSTAR

Specifications

General Specifications	
Senstar System Software Requirements	Senstar Silver or Sennet Network Managers v1.01, v1.21 & v2.03, v.2.22, v.2.32
IndigoVision System Software Requirements	IndigoVision Senstar Integration Module v1.0.2. Compatible with SMS4™ r2/Control Center v11.0 or later
Event and Alarm Integration Capability	Unidirectional flow of events and alarms from the Senstar system into Control Center.
Integration Server Specification	PC requirements for the Senstar Network Manager may vary depending on the size of the control system. Refer to the Senstar Network Manager documentation for advice on machine specifications. The IndigoVision Senstar Integration Module can run on the same PC as the the Senstar Network Manager or any other networked PC. There are no extra requirements on the specification of the PC due to the IndigoVision software. NOTE: The Integration Module is a licensed product. A correctly licensed USB dongle should be present on the platform running the Integration Module. The Integration Module should not be run on the same server as any other licensed IndigoVision software such as the Windows NVR-AS 13.2 or earlier, License Server or any other Integration Module.
Supported Products	Senstar networked sensors connected to the Senstar Network Manager software, including OmniTRAX, Intelli-FLEX and Perimitrax.
Supported Operating Systems	Microsoft® Windows Server 2016®, Microsoft® Windows Server 2012 R2®, Microsoft® Windows Server 2012®, Microsoft® Windows 10® (64-bit), Microsoft® Windows 8.1® (64-bit)

Senstar Events and IndigoVision Actions Supported

Examples of Supported Events
Zone breach alarms
Buried sensor
Fence mounted sensor
Electrostatic field sensor
Microwave sensor
Barrier sensor
Tamper alarms

Examples of Supported Actions
PTZ Camera moves to Preset
Video from one or more cameras displayed on operator's PC
Notification email sent
Video from any camera displayed on an analogue monitor
Recording of camera started
CCTV site map pops up with event source highlighted
Two way audio connection established so operator can listen and talk to the source of the event
Relay triggered action initiated e.g. door opens or lights turn on