

INDIGOVISION

HD & 4MP FIXED CAMERA

BX RANGE

QUICK START GUIDE

PACKAGE CONTENTS

Package contents

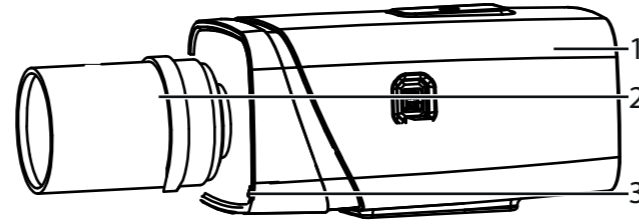


Figure 1 Fixed Camera

Camera

1. Fixed Camera
2. Lens
3. Built-in microphone

Additional items

- 1x Quick Start Guide

SAFETY NOTICES

Warning

- Ensure that the camera is disconnected from the network, or that PoE power is disabled, during installation.
- When installing the camera, fasten it securely to the surface. A falling camera may cause personal injury.
- Do not dismantle the device or attempt repairs yourself. Repairs must be done by IndigoVision representatives.
- Ensure that the power supply conforms to the SELV (Safety Extra Low Voltage) safe level.

Caution

- Only transport, store and install in suitable environments.
- For security reasons, you must change the camera's default username and password. Ensure each camera has a unique IP address.
- Using the incorrect voltage or two power supplies at the same time can damage the camera. Ensure that the correct voltage is used.
- Do not aim at strong light, such as sunlight or electric lighting.
- Ensure that you install the network cable in a location where it will not be trampled or crushed.
- Cameras powered by PoE have been evaluated as network environment '0' (basic insulation) and are not intended for routing outside a common building. Cable runs for cameras should only be run within a common building.



Document ID: IU-FIX-MAN017-3

CONNECTIONS

The camera is connected using connection sockets in the rear panel.

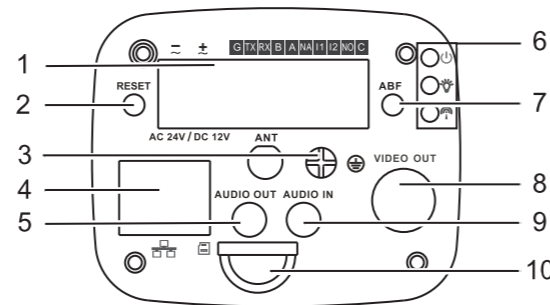


Figure 2 Rear panel

Table 1: Connections

No.	Definition	No.	Definition
1	Terminal block	6	Status indication lights
2	Reset button	7	Auto back focus adjustment
3	Earth screw	8	Video output, BNC connector
4	Ethernet port	9	Audio input, 3.5mm jack
5	Audio output, 3.5mm jack	10	SD card port

Table 2: Terminal block

Connection	Definition	Connection	Definition
AC 24V / DC 12V	Power port	NA	IR light port
G	Ground end of RS232 serial port	IN1	Alarm input port 1
TX	Sending end of RS232 serial port	IN2	Alarm input port 2
RX	Receiving end of RS232 serial port	NO	Normal open alarm output port
B	RS485_B port	C	Common alarm output port
A	RS485_A port		

REGULATORY

- EN 55032 Class A
- EN 55024
- EN 61000-3-2
- EN 61000-3-3
- FCC Part 15 Subpart B Class A
- EN 50130-4
- IEC61000-4-2
- IEC61000-4-3
- IEC61000-4-4
- IEC61000-4-5
- IEC61000-4-6
- IEC61000-4-8
- IEC61000-4-11
- EN60068-2-27
- EN60068-2-6
- EN60068-2-64
- EN60068-2-1
- EN60068-2-2
- EN60068-2-30
- UL60950



Environment

- Temperature:
 - Operating: -10°C to +60°C (14°F to 140°F)
 - Storage: 0°C to +50°C (32°F to 122°F)
- Humidity: 95%

COPYRIGHT © INDIGOVISION LIMITED. ALL RIGHTS RESERVED.

INDIGOVISION, INDIGOULTRA, INDIGOPRO, AND INDIGOLITE ARE REGISTERED TRADEMARKS OF INDIGOVISION LIMITED. CAMERA GATEWAY, AND MOBILE CENTER ARE UNREGISTERED TRADEMARKS OF INDIGOVISION LIMITED. ALL OTHER PRODUCT NAMES REFERRED TO IN THIS MANUAL ARE TRADEMARKS OF THEIR RESPECTIVE OWNERS.

THIS MANUAL IS PROVIDED WITHOUT EXPRESS REPRESENTATION AND/OR WARRANTY OF ANY KIND.

PLEASE CONTACT INDIGOVISION LIMITED (EITHER BY POST OR BY E-MAIL AT TECHNICAL.SUPPORT@INDIGOVISION.COM) WITH ANY SUGGESTED CORRECTIONS AND/OR IMPROVEMENTS TO THIS MANUAL.

CONTACT ADDRESS

CHARLES DARWIN HOUSE,
EDINBURGH TECHNOPOLE,
EDINBURGH, EH26 0PY, UK

FURTHER INFORMATION

FOR FURTHER INFORMATION, SEE THE PARTNER PORTAL:

[HTTPS://PARTNERS.INDIGOVISION.COM](https://partners.indigovision.com)

ALTERNATIVELY, SCAN THE QR CODE BELOW.



1. POWERING UP THE CAMERA

The camera is a Power Over Ethernet (PoE) - Class 0 powered device compliant with the IEEE802.3af standard.

If PoE is not available the camera can be powered using the auxiliary power.

The camera can be powered by the following:

- Power over Ethernet (PoE) switch
- PoE injector/midspan
- Auxillary power supply
 - 12V DC with a maximum power of 8 Watts
 - 24V AC with a maximum power of 6 Watts

A suitable power supply must be ordered separately (Part numbers 130176, 110068).

The camera should only be powered from the specified voltage.

2. CONFIGURING THE CAMERA

Before you connect the camera to your network, you must configure the camera's IP address and subnet mask appropriately.

Configure the settings

1. Connect the camera to a PC using an Ethernet cable.



Ensure that each camera has a unique IP address.

2. Navigate to the camera's default IP address using a web browser, and enter the default user name and password.

Table 3: Default network settings

Default Username	Admin
Default Password	1234
Default IP Address	10.5.1.10
Default Subnet Mask	255.0.0.0
Default Gateway	10.0.0.1

3. Enter the NTP server and port on the **Setup > System > General > Date & Time** menu.
4. Enter a new IP address and subnet mask on the **Setup > Network > TCIP/IP** menu.
5. Select the video standard for your region using the **Video Standard** option on the **Setup > System > General** menu. Choose **PAL** for countries with 50Hz power frequency and **NTSC** for countries with 60Hz power frequency.

Binary I/O connections

The Fixed Camera has two binary input and one binary output. These are connected using the Alarm IO connections on the camera, listed in Table 2.

Binary input

The binary input is operated by connecting the Input directly to GND.

- 10kΩ Pull up input to 3.3V for non-powered contacts
- Normally high

The input must be configured on the Web Configuration pages to ensure correct behavior.

Connect the input to GND using a switch to trigger the input.

Binary output

The binary output is a solid state open collector output:

- Max load voltage: 5V AC/DC
- Max current carrying capacity: 30mA

The binary output is not polarity sensitive and is normally open. This can be configured on the Web Configuration pages.

3. INSTALLATION

After you have configured your camera's IP settings, you are ready to install it in its final position.

Lens installation

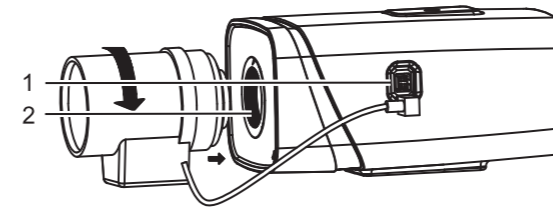


Figure 3 Attaching the lens

To install the lens, remove the CCD protection cover from the camera.

1. Attach the lens to the camera, as shown in Figure 3.
2. Insert the lens cable plug into the auto aperture lens connector (1) on the camera side panel.
3. Adjust the focal length to improve the image. Use the Auto Back Focus (ABF) button on the rear for fine focus adjustments. ABF is also accessible using the Configuration pages under **Setup > Settings > Conditions > Zoom and Focus > Auto focus**.
4. Select the appropriate white balance setting for your lens selection in the firmware under **Setup > Camera > Conditions > White balance**.
 - **Auto 1:** Standard Lens (default)
 - **Auto 2:** Telephoto Lens

Camera installation

The HD & 4MP Fixed Camera can be installed on a wall or ceiling using a suitable stand, or in a suitable housing.

Notice Ensure the wall or ceiling the camera is mounted on is strong enough to support the camera.

4. OPERATIONS

Configuring the camera

You can access the camera configuration pages using the IP address of the camera.

Alternatively, you can access these pages through IndigoVision Control Center.

1. In Setup view, select the camera you want to configure.
2. Select the **Configure** tab, and enter a valid user name and password if required.

SD card installation

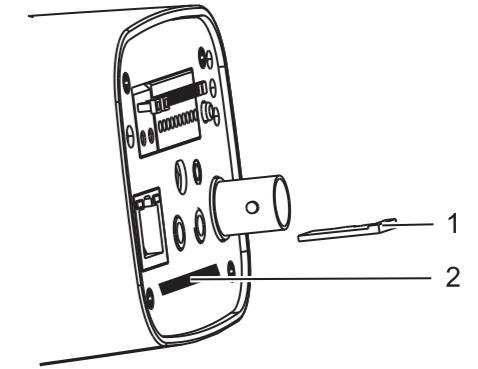


Figure 4 SD card installation

To install an SD card, insert the SD card (1) into the SD card slot (2) as shown in Figure 4.

Reset to factory defaults

You can reset the camera settings to factory defaults using the following methods:

- On the rear panel of the camera, press and hold the RESET button on the camera for ten seconds.
- Click **Setup > Default > Default** on the camera's Configuration page.

Status indication lights

Table 4: Status indication lights

Indication light	Light color	Function
	Red	<ul style="list-style-type: none">• Steady red light: system is booting up• Flashing red light: system upgrades• Green light off, red light on: system is resetting
	Green	<ul style="list-style-type: none">• Steady green light: normal working status• Flashing green light: camera is recording
	Yellow	<ul style="list-style-type: none">• Not supported